Trouble Shooting DSL305EU USB Driver.

| Frame 1: IP Configuration Ethernet Adapter Information | 1. 2. 3. | Click Start . Click Run . Type winipcfg and click OK |
|---|---|--|
| PPP Adapter. Adapter Address IP Address 0.0.0 Subnet Mask 0.0.0 Default Gateway OK Releage Releage All Renew All | 4. 5. 6. 7. 8. 9. 10. | An example shown on the left. Check "ADSL Ethernet & USB Router" is present. If present, select "ADSL Ethernet & USB Router". Click on Release to release IP Address. Click on Renew to renew IP Address. You are ready to access the Router when you get an IP address. If not present go to Frame 2. |
| Frame 2: Add/Remove Programs Properties Install/Uninstall Windows Setup Startup Disk Imatell/Uninstall Windows Setup Startup Disk Imatell/Uninstall Windows Setup Startup Disk Imatell/Uninstall Windows Setup Imatell/Uninstall Windows Setup Imatell/Uninstall Imatellity Imatell/Uninstall Imatellity Imatell/Uninstall Imatellity Imatellity Imatellity | | Click Start. Select Setting. Click Control Panel. Double Click "Add/Remove Programs" An example shown on the left. Check "ADSL Ethernet & USB Router" is shown. If shown, Select "ADSL Ethernet & USB Router" Click "Add/Remove " to remove the driver. The program will prompt you to restart PC. At this point remove your Router. Go to Frame 4. If "ADSL Ethernet & USB Router" is not shown go to |
| OK Cancel Apply | | Frame 3. |

| Frame 3: System Properties | 1. 2. | Click Start. Select Setting. |
|---|----------|--|
| | 3. | Click Control Panel. |
| General Device Manager Hardware Profiles Performance | 4. | Double Click on the System. |
| View devices by type O View devices by connection | 5. | Select Device Manager. |
| E Computer | 6. | An example shown on the |
| E⊡en CDROM E⊡en Disk drives | | left. |
| E - ■ Disk drives ⊡ - ■ Display adapters | 7. | Check is there any "Other |
| E S Floppy disk controllers | | Devices" and |
| E → → Hard disk controllers | | show "USB Device". (Note: |
| E - ∰ Keyboard E - III Monitors | | This will not show if the |
| B Mouse | | Router is |
| Image: Imag | 8. | unplug) If shown, select |
| En 😵 Other devices | | USB Device and click Remove. |
| ⊕ J Ports (COM & LPT) | 9. | Unplug the |
| 🗄 🏭 Sound, video and game controllers | | Router after Step 8 is |
| 🗈 🖶 System devices 🗄 🖶 🔂 Universal Serial Bus controllers | | complete. |
| | 10. | Restart the PC. |
| P <u>r</u> operties <u>Refresh</u> R <u>e</u> move Pri <u>n</u> t | | |
| | | |
| OK Cancel | | |
| Frame 4: | 1. | After the PC has |
| Update Device Driver Wizard | | restart. Plug in |
| This wizard searches for updated drivers for: | 2. | the Router. The OS will |
| | | detect the Router and will |
| USB Device | | shown a |
| | | dialogue box as shown on the |
| A device driver is a software program that makes a | 3. | left. Insert the |
| hardware device work. | | DSL305EU |
| Upgrading to a newer version of a device driver may | | Driver CD to the CD-ROM |
| improve the performance of your hardware device or add functionality. | 4. | Click Next. |
| | | |
| | | |
| | | |
| | | |
| < Black Next > Cancel | | |
| | | |

| Frame 5: | | 1. | The next |
|-----------------------------|--|----|---|
| Update Device Driver Wizard | | | dialogue box will |
| | What do you want Windows to do? Search for a better driver than the one your device is using now. (Recommended) Display a list of all the drivers in a specific location, so you can select the driver you want. | 2. | shown as on the left. Select as shown on the left and click Next . |
| | < <u>B</u> ack Next > Cancel | | |
| Frame 6: | | 1. | The next |
| Update Device Driver Wi | zard | | dialogue box will shown as on the |
| | Windows will search for updated drivers in its driver database on your hard drive, and in any of the following selected locations. Click Next to start the search. Eloppy disk drives CD-ROM drive | 2. | left. Select as shown on the left and click Next . |
| | Microsoft Windows Update | | |
| | Specify a location E:\WinDrv Browse | | |
| | < <u>B</u> ack Next > Cancel | | |

| Frame 7: | | 1. | The next |
|-----------------------------|--|----|---|
| Update Device Driver Wizard | | | dialogue box |
| | Windows driver file search for the device: | 2. | will shown as on the left. 2. Click Next to continue. |
| | ADSL Ethernet & USB Router | 3. | The driver will install to the PC and the |
| | Windows is now ready to install the best driver for this device. Click Back to select a different driver, or click Next to continue. Location of driver: E:\CXTTRUSB.INF | 4. | program will prompt you to restart the PC. Go back to Frame 1 to ensure the driver is installed properly. |
| < <u>B</u> ack Next> Cancel | | | |