



**Quick Install Guide**  
for Macintosh 8.0 or higher

**DFE-528TX**  
Fast Ethernet Adapter

## Contents of Package:

DFE-528TX 10/100 Fast Ethernet Adapter

Quick Install Guide

CD-ROM, which includes driver software

*If any of the above items are missing, please contact your reseller.*

## Requirements:

- PowerPC-based Macintosh computer with free PCI slot
- Operating System 8.0 or higher
- A .SIT and .ZIP-compatible utility such as Aladdin Systems Stuffit or Stuffit Expander. Aladdin currently provides a free download of Stuffit Expander at their website at [www.aladdinsys.com](http://www.aladdinsys.com)

## Installation Procedure:


1. Install the DFE-528TX
2. Install the Drivers
3. Configure the Network Services



### Installing the DFE-528TX into the computer's PCI slot

*Note: Make sure that Aladdin Systems “Stuffit” or “Stuffit Expander” has been installed on your computer before you continue with the installation.*

- Turn OFF the computer
- Insert the DFE-528TX into an available PCI slot

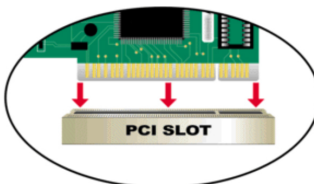


# 2

## Installing the DFE-528TX Drivers


- **Turn ON** the computer
- **Insert** the CD-ROM into the Macintosh's CD-ROM drive



**Double click** on the CD-ROM icon on the desktop

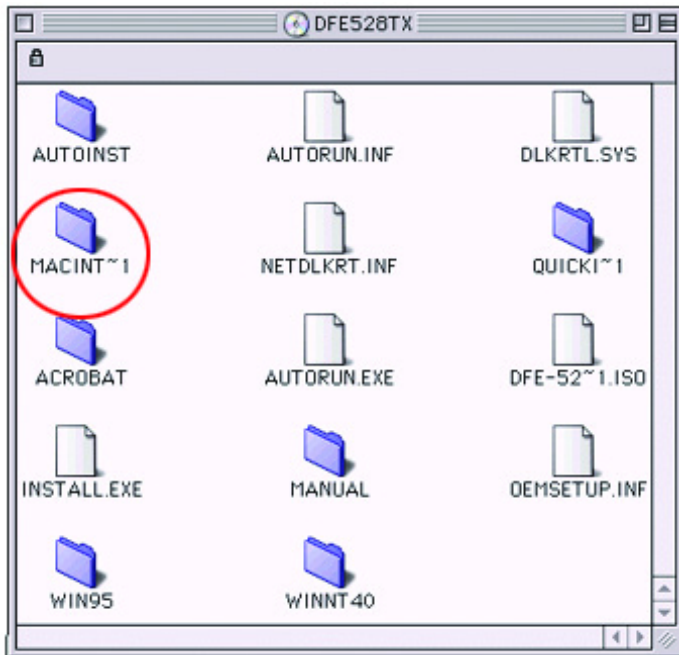

**Double-click** on the “Macintosh” folder.

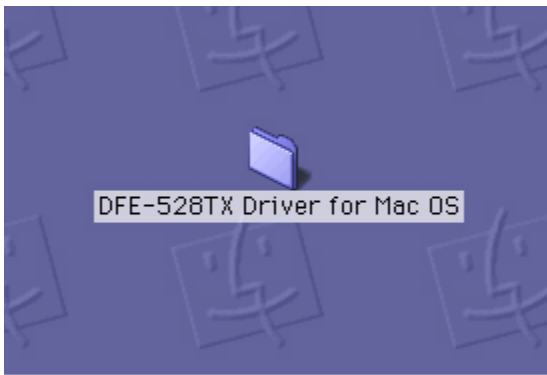


**Copy** the folder “**DFE-528TX Driver for Mac OS**” to the desktop.  
**Double-click** on the folder “**DFE-528TX Driver for Mac OS**”



**Double-click** on the “**Installer**” icon.



**Click “Install”** to continue.

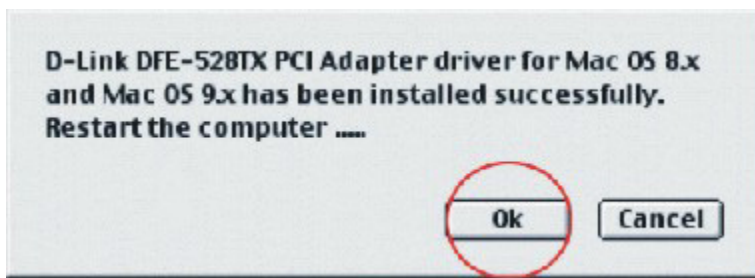


Click “OK” to restart the computer.

After the computer restarts, the driver is installed.

## 3

## Checking Installation of the DFE-528TX Drivers

Go to the **Apple Menu>Controls Panel>Extensions Manager**. Scroll down to find **DFE-528**. Make sure that the box to the left is checked.

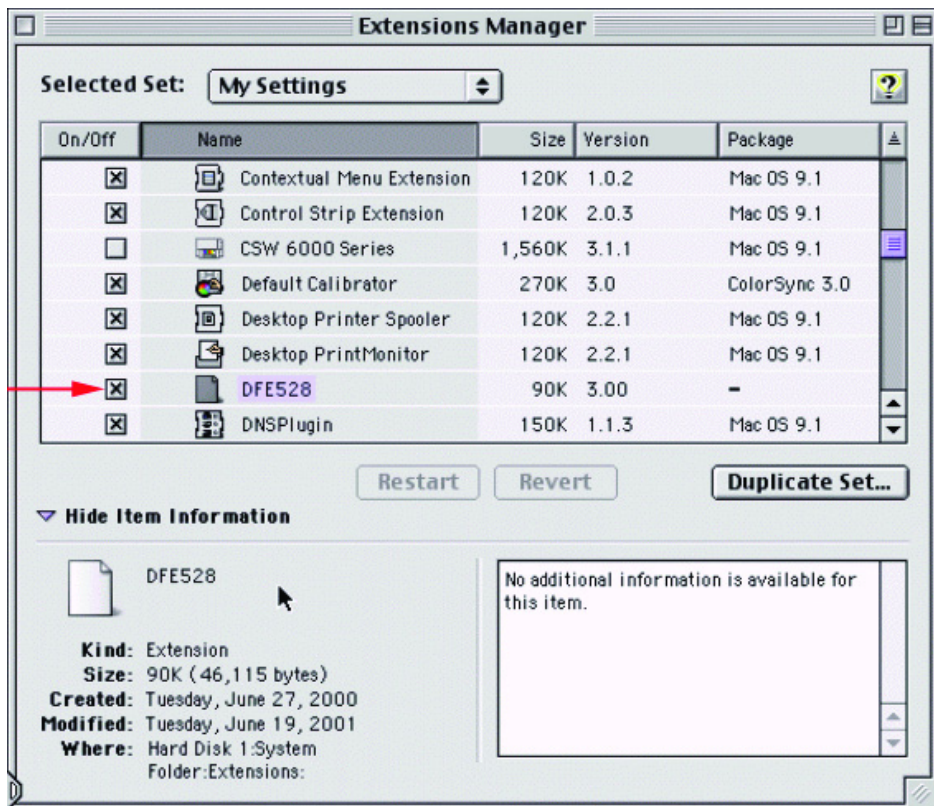

Before the adapter can be used, you will need to configure network services as shown in **Step 4**.

# 4

## Configuring Network Services

1. Open the **Apple menu**.
2. Go to **Control Panels>AppleTalk** control panel.
3. Select **Ethernet D-Link Port** from the **Connect via:** list box.
4. Do **not** choose **DFE-528 Ethernet**. If you do not see it, go back to the beginning of this guide and install the drivers again.
5. When the installation is successful, and you have completed this step, choose **“Quit”** from the **“File”** menu.
6. **Click “Save”** when prompted to save the new settings.
7. Open the **Apple menu** again.
8. Go to **Control Panels>TCP/IP** control panel.
9. Select **Ethernet D-Link Port** from the **Connect via:** list box.
10. From the **Configure:** list box, choose **“Using DHCP Server”** if you are automatically assigned a **“Dynamic IP address.”** If you are not automatically assigned an IP address, choose **“Manual”** for a **“Static IP address.”**
11. Choose **“Quit”** from the **“File”** menu.
12. **Click “Save”** when prompted to save the new settings.

*Restart your computer one more time.  
Your adapter is now ready to network with other computers.*

## CONTACTING TECHNICAL SUPPORT

You can find the most recent software and user documentation on the D-Link website.

**D-Link** provides free technical support for customers within the United States for the duration of the warranty period on this product.

U.S. customers can contact **D-Link** technical support through our web site.

Web:

<http://www.dlink.com>

## Notes

