

hp compaq d330 Series Personal Computer

illustrated parts map
Slim Tower



© 2003 Hewlett-Packard Development Company, L.P.

HP and the HP logo are trademarks of Hewlett-Packard Development Company, L.P.

All other product names mentioned herein may be trademarks of their respective companies.

HP shall not be liable for technical or editorial errors or omissions contained herein. The information in this document is provided "as is" without warranty of any kind and is subject to change without notice. The warranties for HP products are set forth in the express limited warranty statements accompanying such products. **Nothing herein should be construed as constituting an additional warranty.**

May 2003


Document Number
334263-001



Cables

1	Diskette drive cable (168999-005)	337244-001
2	UATA data cable, 13.5" (108950-045)	337247-001
3	UATA data cable, 8.6" (108950-044)	337246-001
4	Audio cable (CD to system board) (387527-001)	149806-001
5	Power switch/LED cable with switch holder	337243-001
6	Front I/O device with cable	337242-001
*	Solenoid lock cable	255438-001
*	DVI video cable (use with 322893-001)	285380-001
*	VGA cable (use with 322893-001)	285379-001

*Not shown

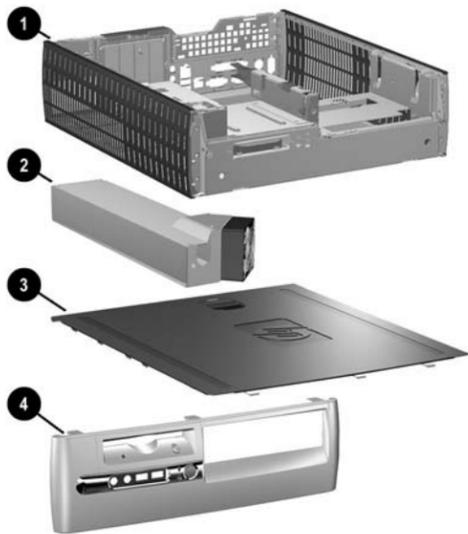

System Unit

1	Chassis assembly	not spared
2	Power supply, PFC	308617-001
3	Computer access panel	337238-001
4	Front bezel assembly with diskette drive bezel	337022-001

Easy Access Keyboards (not illustrated)

PS/2	323686-xxx
Wireless	323745-xxx
USB	324634-xxx
USB	323746-xxx

Finnish	-351	PRC	-AA1
French Canadian	-121	Swiss#	-111
International	-B31	Taiwanese	-AB1
International*	-021	Thai	-281
Japanese	-291	U.S.	-001
Korean (Hanguel)	-AD1		


*for 324634-xxx only #for 323686-xxx only

Easy Access Keyboards (not illustrated)

PS/2	325445-xxx
International	-B31

Mass Storage Devices (not illustrated)


40 GB\5400 RPM Hard drive	236921-001
80 GB\5400 RPM Hard drive	292208-001
40 GB\7200 RPM Hard drive	286692-001
80 GB\7200 RPM Hard drive	250185-001
160 GB\7200 RPM Hard drive	325306-001
Diskette drive with mounting screws	333505-001
48X CD-ROM drive with mounting screws	326773-001
48X/24X/48X CDRW	325308-001
48X/24X/48X +16X DVD/CD-RW	325309-001
4X DVD+R/RW	325317-001
16/40X DVD ROM Drive	325313-001
Zip 250 Drive with mounting bracket	333504-001
Zip 250 drive without mounting bracket	326772-001
PC MCIA drive bay reader	331589-001

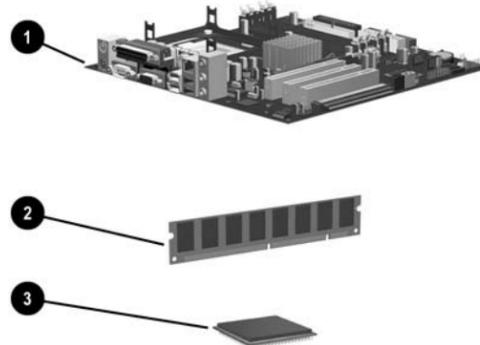

Standard and Optional Boards

1	System board with alcohol pad and thermal grease	323091-001
Memory Modules		
2	128 MB/400 MHz FSB	335697-001
*	256 MB/400 MHz FSB	335698-001
*	512 MB/400 MHz FSB	335699-001
*	1.0 GB/400 MHz FSB	335700-001
*	128 MB/333 MHz FSB	314795-001
*	256 MB/333 MHz FSB	314793-001
*	512 MB/333 MHz FSB	314796-001
*	1.0 GB/333 MHz FSB	314794-001
*	128 MB/266 MHz FSB	285648-001
*	256 MB/266 MHz FSB	285649-001
*	512 MB/266 MHz FSB	285650-001
Intel Processors with alcohol pad and thermal grease		
3	Celeron 2.0 GHz processor	309578-001
*	Celeron 2.2 GHz processor	321723-001
*	Celeron 2.3 GHz processor	335136-001
*	Pentium 2.4 GHz processor	288689-001
*	Pentium 2.53 GHz processor	333485-001
*	Pentium 2.66 GHz processor	305579-001
*	Pentium 2.8 GHz processor	305051-001
*	Pentium 3.0 GHz processor	315637-001
*	Pentium 2.4 GHz processor with Hyperthreading	335812-001
*	Pentium 2.6 GHz processor with Hyperthreading	333863-001
*	Pentium 2.8 GHz processor with Hyperthreading	333864-001
*	Pentium 3.0 GHz processor with Hyperthreading	333865-001
*	Pentium 3.2 GHz processor with Hyperthreading	335813-001
Other Cards		
*	Lucent 56k modem with ATX bkt	239411-001
*	Lucent 56k modem with low profile bkt	277918-001
*	Intel Gigabit NIC	314901-001
*	Wireless LAN PCI Adapter (802.11)	332963-001
*	nVidia GeForce2 MX400, 32 M low profile bkt	309471-001
*	nVidia GeForce2 MX400, 32 M, ATX bkt	309492-001
*	nVidia GeForce4 MX440, 64 M, ATX and low profile bkts	322891-001
*	nVidia Quadro4 100 NVS, 64 M, ATX and low profile bkts	322893-001
*	nVidia Quadro4 100 NVS, 32 M, low profile bkt	335814-001
*	AGP card with DVI output, low profile bkt	335815-001
*	DVI ADD 4-layer card	325833-001


*Not shown

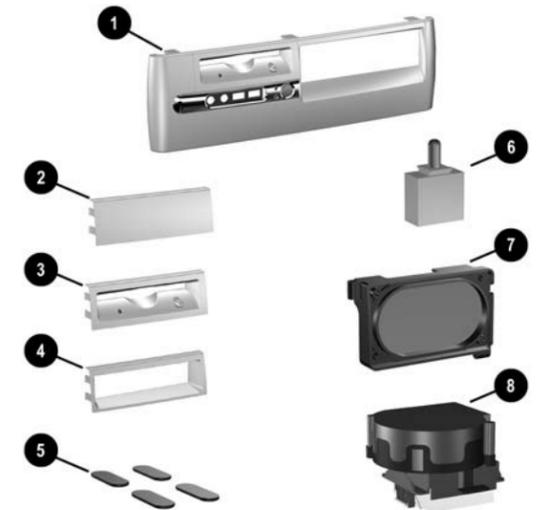

Miscellaneous Parts

1	Front bezel assembly with diskette drive bezel	337022-001
*	5.25" Bay bezel blank	335937-001
2	Diskette drive bay bezel blank	337019-001
4	3.5" drive bay bezel (for Zip drive)	337021-001
*	Solenoid lock without cable	335810-001
5	Rubber foot (4 ea)	337545-001
6	Hood sensor	267529-001
7	Speaker with housing	337249-001
8	Heatsink with thermal grease and alcohol pad	336580-001
*	Chassis fan	342685-001
*	Mouse, 2-Button, PS/2 with scroll wheel	323614-001
*	Mouse, 2-Button, USB, optical with scroll wheel	323617-001
*	Mouse, 2-Button, wireless with scroll wheel	323616-001
*	Mouse, 2-Button, USB, with scroll wheel	323615-001
*	Misc screw kit, includes:	337237-001
*	M3 x 5mm, hitop (263585-001) 4 ea	
*	#6-32 x .250, hitop (262508-001) 8 ea	
*	#6-32 x .250, pan head (101517-037) 3 ea	
*	#6-32 x .312, hitop (262508-002) 4 ea	
*	#6-19 x .312, pan head (101346-068) 2 ea	
*	#6-19 x .315, T15 head (331310-001) 2 ea	
*	Drive Key, 16 MB	324780-001
*	Drive Key, 64 MB	331465-001
*	Drive Key, 128 MB	331466-001
*	Return kit with buns	337911-001
*	Real-time-clock battery	153099-001
*	Port control cover	340399-001

*Not shown

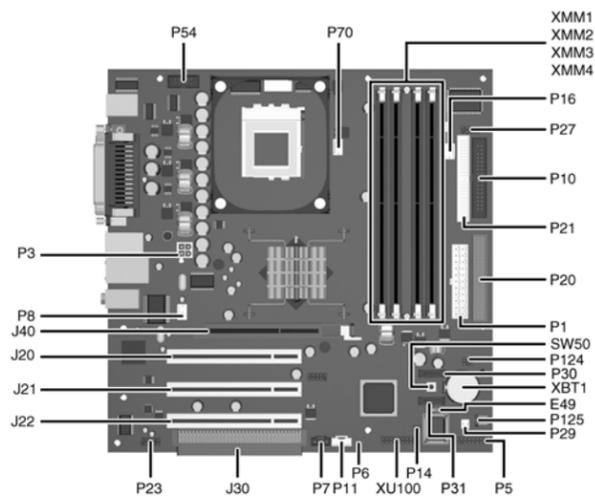

System Board Connectors and Jumpers (position of some untitled components may vary in location)

E49	Password jumper	P21	Secondary IDE
J20	PCI slot 1	P23	Front audio/USB
J21	PCI slot 2	P27	Multi Bay
J22	PCI slot 3	P29	SCSI LED
J30	PCI slot extender	P30	Primary Serial ATA (SATA) Port
J40	AGP slot	P31	Secondary Serial ATA (SATA) Port
P1	Main power (20 pin)	P54	Serial Port "B"
P3	CPU regulator power (4 pin)	P70	CPU fan
P5	Front panel	P124	Hood lock
P6	Internal chassis speaker	P125	Hood sensor
P7	CD audio in	SW50	CMOS button
P8	Chassis fan	XBT1	Battery
P10	Diskette drive	XMM1	Memory socket
P11	Aux audio in	XMM2	Memory socket
P14	Boot block	XMM3	Memory socket
P16	Power supply fan control	XMM4	Memory socket
P20	Primary IDE	XU100	Security

System Hardware Interrupts

IRQ	System Function	IRQ	System Function
0	Timer Interrupt	8	Real-Time Clock
1	Keyboard	9	Unused
2	Interrupt Controller Cascade	10	Unused, available for PCI
3	Serial Port (COM B)	11	Unused, available for PCI
4	Serial Port (COM A)	12	Mouse
5	Unused, available for PCI	13	Coprocessor
6	Diskette Drive	14	Primary ATA (IDE) Controller
7	Parallel Port (LPT 1)	15	Secondary ATA (IDE) Controller

Computer Diagnostic LEDs (on front of computer)

LED	Color	LED Activity	State/Message
Power	Green	On	(S0) Computer on
Power	Green	1 blink every 2 seconds	(S1) Suspend Mode
Power	Green	1 blink every 2 seconds	(S3) Suspend to RAM
Power	Green	Off	(S4) Suspend to Disk (if applicable)
Power	Clear	Off	(S5) Computer off
Power	Red	1 blink followed by 2-second pause - Repeat	Power Supply failure
Power	Red*	2 blinks 1 second apart	CPU thermal shutdown
Power	Red*	3 blinks 1 second apart	CPU not installed
Power	Red*	4 blinks 1 second apart	Power supply overload (crow bar)
Power	Red*	5 blinks 1 second apart	No memory
Power	Red*	6 blinks 1 second apart	No graphics
Power	Red*	7 blinks 1 second apart	System board failure (detected prior to video)
Power	Red*	8 blinks 1 second apart	Invalid ROM
Hard Drive	Green	Blinking	Hard drive activity

*Blinking codes are repeated after a 2 second pause.

Keyboard Diagnostic LEDs, PS/2 Keyboards Only

LED	Color	LED Activity	State/Message
Num, Caps, Scroll Lock	Green	On (Rising Tone)	ROM reflashed successfully
Num Lock	Green	On	ROMPaq diskette not present, is bad, or drive not ready.*
Caps Lock	Green	On	Enter password.
Num, Caps, Scroll Lock	Green	Blink On in sequence, one at a time - N, C, SL	Keyboard locked in network mode

* Insert valid ROMPaq diskette in drive A. Turn power switch off, then on to reflash ROM. If ROM flash is successful, all three keyboard LEDs will light up, and you will hear a rising tone series of beeps. Remove diskette and turn power off, then on to restart the computer. For more information about flashing the ROM, refer to the Troubleshooting guide.

Clearing CMOS*

The computer's configuration (CMOS) may occasionally be corrupted. If it is, it is necessary to clear the CMOS memory using switch SW50.

To clear and reset the configuration, perform the following procedure:

1. Prepare the computer for disassembly.

CAUTION: The power cord must be disconnected from the power source before pushing the Clear CMOS Button (NOTE: All LEDs on the board should be OFF). Failure to do so may damage the system board

2. Remove the access panel.
3. Press the CMOS button located on the system board and keep it depressed for 5 seconds.
4. Replace the access panel.
5. Turn the computer on and run F10 Computer Setup (Setup-utility) to reconfigure the system.

*When the CMOS button is pushed or the jumper is removed, both the power-on password and the setup password become invalid because both are stored in the configuration memory. You will need to reset the passwords.

Disabling or Clearing the Power-On and Setup Passwords*

1. Turn off the computer and any external devices, and disconnect the power cord from the power outlet.
2. Remove the access panel.
3. Locate the header and jumper labeled E49.
4. Remove the jumper from pins 1 and 2. Place the jumper over pin 2 only, in order to avoid losing it.
5. Replace the access panel.
6. Plug in the computer and turn on power. Allow the operating system to start.
NOTE: Placing the jumper on pin 2 clears the current passwords and disables the password features.
7. To re-enable the password features, repeat steps 1-3, then replace the jumper on pins 1 and 2.
8. Repeat steps 5-6, then establish new passwords.

Refer to the Computer Setup (F10 Setup) instructions to establish new passwords.

*When the CMOS button is pushed or the jumper is removed, both the power-on password and the setup password become invalid because both are stored in the configuration memory. You will need to reset the passwords.

Computer Setup (F10) Utility Features (not all features may be available)

File	System Information About Set Time and date	Save to Diskette Restore From Diskette Set defaults and Exit	Ignore Changes and Exit Save Changes and Exit
Storage	Device Configuration Options	IDE DPS Self-Test Controller Order	Boot Order
Security	Setup Password Power-On Password Password Options Smart Cover	Smart Sensor DriveLock Master Boot Record Security Save Master Boot Record	Restore Master Boot Record Device Security Network Service Boot System IDs
Advanced	Power-On Options Onboard devices	PCI Devices Bus Options	Device Options PCI VGA Configuration

Note: See Computer Setup (F10) Utility Guide on the Documentation Library CD.

Heat Sink Removal

